INSTALLATION INSTRUCTIONS

Mountina



LED SLIM SURFACE MOUNT 0-10V DIMMING 7"

Ε

Springs

(Optional)

(2 pcs)

F E26 lamp

holder (Optional)

(1 pc)



C

Wire nuts

(3 pcs)



WARNING

FOR YOUR SAFETY READ AND UNDERSTAND INSTRUCTIONS COMPLETELY BEFORE STARTING INSTALLATION. BEFORE WIRING TO POWER SUPPLY, TURN OFF ELECTRICITY AT THE FUSE OR CIRCUIT BREAKER BOX.



CAUTION: RISK OF FIRE

SUPPLY CONDUCTORS (POWER WIRES) CONNECTING THE FIXTURE MUST BE RATED MINIMUM 90°C. IF UNCERTAIN, CONSULT AN ELECTRICIAN.




CAUTION: RISK OF ELECTRIC SHOCK

DISCONNECT POWER BEFORE OR CIRCUIT BREAKER BEFORE INSTALLING OR SERVICING



SAFETY PRECAUTIONS



<u>\(\) \(\) \(\)</u>

COMPATIBLE DIMMERS

PACKAGE CONTENTS

A

LED Low Profile Flsh Mount

(1 pc)

В

Mounting

screws

(2 pcs)

LUTRON	LEVITON	
• DVSTV	• DS710	

ASSEMBLY INSTRUCTIONS

- 1. PREPARING FOR INSTALLATION: DISCONNECT ELECTRICAL POWER BEFORE INSTALLING OR SERVICING ANY PART OF THIS FIXTURE.
- 2. THIS PRODUCT SHALL BE SURFACE MOUNTED WITH JUNCTION BOX OR NON-COMBUSTIBLE SURFACE ABOVE 4 FEET (1.2 METER) HIGH. USER SHOULD PREPARE NECESSARY ACCESSORIES AND SPARE PARTS (NOT PROVIDED) INCLUDING JUNCTION BOX AND SCREWS.

TOOLS REQUIRED





Safety Goggles







Flathead Screwdriver





Flectrical Tane




Wire Cutters

INSTALLATION (CONSULT A QUALIFIED ELECTRICIAN BEFORE INSTALLING)

INSTALLATION: OPTION#1: FLUSH MOUNT

Step 1: Prior to installation, install mounting plate into electrical outlet box with mounting screws. Drive screws completely to the end of the junction box.




Step 2: Connect supply wires to wires on the fixture with wire nuts, or push wires into Quick Connector.Connect white to white, black to black, and copper wire to copper wire as grounding connection.




Step 3: Complete installation by pushing the fixture into the mounting plate

WARNING:
Changes or
modifications
not expressly approved by the
party responsible for
compliance could void the
user's authority to operate the
equipment.

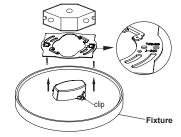


INSTALLATION: OPTION#2: RETROFIT A RECESSED CAN

Step 1: Insert wires into Quick Connector. Black to black and white to white. Attach ground wire to ground screw in recessed can.




Phillips Screwdrive

Step 2: Place E26 lamp holder into socket base.

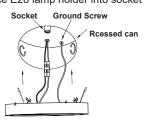

Step 3: Connect quick connectors and tuck all wires into recessed can. Squeeze springs and push up into recessed can.

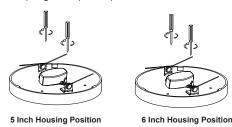



www.jescolighting.com support@jescolighting.com **Tech Support:** 855.592.0029

15 Harbor Park Drive Port Washington, NY 11050 Main Line: 800.527.7796 Fax Line: 855.265.5768 219 South 6th Ave City of Industry, CA 91746 Main Line: 855.654.0110 Fax Line: 626.333.2955